DIAMETER 3" NOMINAL

3ED3P


SEDS

Oscilloscope Tube

ELECTROSTATIC FOCUS. ELECTROSTATIC DEFLECTION.

DATA

DAIA	
GENERAL:	
Heater: Voltage 6.3	. a.c. or d.c. volts.
Current 0.6	. amp.
Direct Inter-electrode Capacitances:	_
Modulator to all other electrodes .	. 10.5µµf.
Each X Plate to all other electrodes .	. 11.0µµf.
Each X Plate to all other electrodes . Each Y Plate to all other electrodes .	. 9.0μμf.
Deflector Plates X1 to X2	. 4.0µµք.
Deflector Plates Y1 to Y2	. 3.5μμf.
Screen:	
Fluorescence	. Blue.
Afterglow	. Yellow.
Persistence of Afterglow	. Long
(10 sec. min /100 sec. max. fo	r 1% initial brightness).
Focussing Method	. Electrostatic Electrostatic.
Deflecting Method	. Electrostatic.
Overall Length Greatest Diameter of Bulb Minimum Useful Screen Diameter Mounting Position Anode Cap	$254 \pm 6 \text{ mm}$.
Greatest Diameter of Bulb	. 77.8 mm.
Minimum Useful Screen Diameter	. 69.0 mm.
Mounting Position	. Any.
Anode Cap	. Recessed Ball
•	BSS448/C17.
Base	. B14A.
	Pin 8—Y2.
Pin 1—Heater.	Pin 9—Anode 1 and
Pin 2—Cathode.	Anode 3.
Pin 3—Modulator.	Pin 10—X2.
Pin 5—Anode 2.	/
Pin 7—Y1. (3) (2)	Pin 12—No connection.
	Pin 14—Heater.
1 (14)	Cap—Anode 4 P.D.A.
Typical Operating Conditions:	
Anode 1 and Anode 3 (2500 volts max.)	. 1500 volts.
Anode 2	350/500 volts.
Anode 4 P.D.A. (5000 volts max.)	3000 volts.
Modulator volts for cut-off	–65 volts max.
1/100011101	
Deflection Sensitivity:	
Denection Sensitivity.	mm./volts.
X Plate	. 0.15 to 0.2
Y Plate	. 0.2 to 0.27
i i i alc	

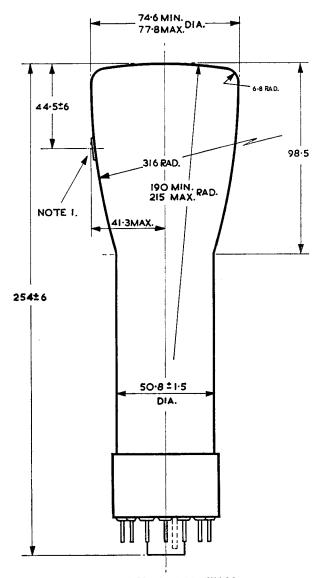

ALL SIZES IN MILLIMETRES.

- Note 1. The angle between the trace produced by X1, X2 and a plane through the tube axis, Pin 5 and the P.D.A. Cap may vary by an angular tolerance of 10°. The P.D.A. Cap is on the same side of the tube as Pin 5.
- Note 2. The angle between the trace produced by X1 and X2 and the trace produced by Y1 and Y2 is $90^{\circ} \pm 3^{\circ}$.
- Note 3. The undeflected focused spot will fall within a circle having a 7 m.m. radius concentric with the centre of the tube face.
- Note 4. When viewing the screen with the tube positioned such that Pin No. 5 is on the left, a positive voltage applied to the terminal X1 will deflect the spot to the left and a positive voltage applied to the terminal Y1 will deflect the spot upwards.